



NOTES:

1. AIR RELIEF VALVE MAY CONNECT DIRECTLY TO DRIP LINE DEPENDING ON WHERE HIGH POINT OF SYSTEM IS LOCATED. REVIEW WITH UNIVERSITY'S REP. PRIOR TO INSTALLATION.
2. WHEN CONNECTING DIRECTLY TO DRIP LINE USE BLANK TUBING, BARB X FPT CONNECTOR, AND APPROPRIATE FITTINGS PER MANUFACTURERS RECOMMENDATION TO CONNECT TO AIR RELIEF VALVE.